



Staying Houseproud



HEATED THROW

INSTRUCTION MANUAL



Please retain instructions for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should not use this product due to their inability to react to overheating.

Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the product only if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy. Children should be supervised to ensure they do not play with the product.

Particular attention should be given where children and vulnerable people are concerned.

This product must not be used by persons insensitive to heat or by other vulnerable persons unable to react to overheating.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. If storing, allow to cool fully before folding the product and store without items on top of the product to avoid damage from creasing.

Nominal voltage is still present in this product as long as the product is connected to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the control box or plug in water or any other liquid.

Do not use the product with wet hands or damp feet.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not insert pins into the product.

Do not use the product folded or tucked in – regularly check that the product and cord do not become trapped or rucked.

Do not use this product on an adjustable bed.

Do not pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.

Do not use the product when it is wet.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product.

This product is intended for domestic use only. It should not be used for commercial purposes or medical use in hospitals.



DO:

Examine frequently for signs of damage or wear.

Use as a loose throw only.

Only use with the detachable control unit provided.

Hang to dry without pegs to avoid damage.

Only use with the control box supplied.

DON'T:

Use if damaged.

Leave the heated throw plugged in when not in use.

Operate overnight or while sleeping.

Use the heated throw to warm animals or pets.

Use the heated throw for extended periods of time – a build-up of heat could cause overheating of the body (heatstroke).

Clean the heated throw with abrasive chemicals or materials, such as scourers, as they may damage the heated throw and impair future function. (This includes insecticide and chemical solvents. Wash the heated throw according to the instructions on the care label.)

Use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the heated throw.

Use an extension cord with the heated throw.

Tuck the heated throw in or wrap it tightly as this may result in overheating.

Place the control box under a pillow, under sheets, or in direct contact with the heated throw when in use.

Thermal Cut-out Device

This product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will

automatically operate and the electric heated throw will turn off and the remote will display 'C'. please allow the product to cool down for 15 minutes before turning back on.

CAUTION: Do not leave the heated throw folded or crumpled whilst it is turned on, as this will cause overheating.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off the heated throw and unplug it from the mains power supply. Disconnect the controller from the heated throw using the retaining clip on the connector.

Do not immerse the controller in water or any other liquid. The heated throw has waterproof heating elements, making it safe to immerse in water and wash either by hand or by machine.

NOTE: Check the wiring between the two stickers. If there is any damage, stop using the heated throw immediately.

CAUTION: Before washing, always remove the controller; do not allow any part of the controller to be immersed in water or any other liquid.

WARNING: Do not dry clean the heated throw.

Checking for Wear and Damage

Check the heated throw regularly for signs of wear or damage. Return the heated throw to the supplier who will advise on whether it is still safe to use.

 
NOTE: It is normal for the control box to be warm to the touch.

WARNING: If the heated throw shows any of the following signs of wear or damage, stop using immediately:

- Fraying fabric
- Scorch marks
- Exposed elements or internal parts

- Creasing or folding (which pose a risk of the heated throw overheating)
- Soiling
- Damp/wet patches
- Tie down strings damaged or missing
- Worn flex cable or damage to plug
- Loose electrical connections

Description of Parts

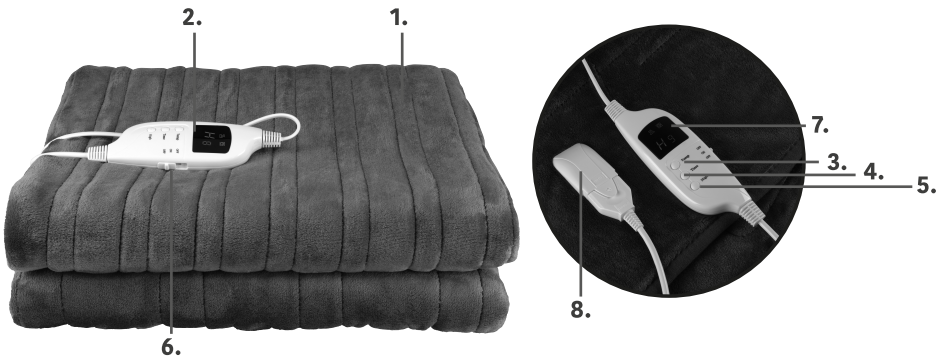


- | | |
|-------------------------------|-----------------------------|
| 1. Heated Throw main unit | 5. High heat setting button |
| 2. Temperature control box | 6. On/Off switch |
| 3. Temperature control button | 7. Controller display |
| 4. Time control button | 8. Connector |

Instructions for Use

Connecting and Disconnecting the Controller

 To connect the controller, lift the locking tab and insert into the socket on the throw.

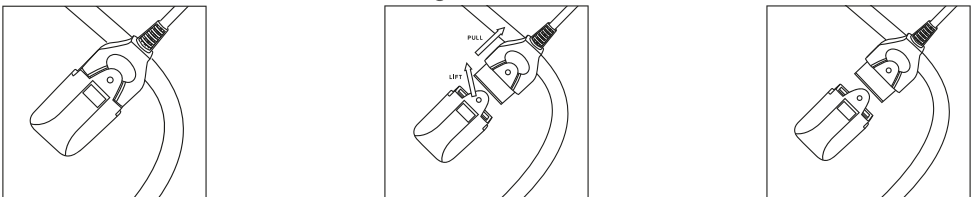

To disconnect the controller, lift the locking tab and pull the plug out; do not pull the cable and do not attempt to remove without lifting the locking tab as this will damage the socket.

STEP 1: Secure the controller to the throw, and then connect the heated throw to the mains power supply.

STEP 2: To operate the throw, slide the On/Off switch to the 'On' position. Preheat the heated throw for approx. 30 mins by pressing the high heat setting button ensuring the throw is laid flat.

STEP 3: Adjust the temperature by pressing the temperature control button to cycle through the different heat settings.

STEP 4: Adjust the timer by pressing the time control button to cycle through the different time settings.

NOTE: If the heated throw is left on 'H' heat setting for 60 minutes, the control will automatically switch to 'L' heat setting.

WARNING: Do not have the controller set to a high heat setting for a long period of time, always switch it to the low heat setting for extended use.

Unplug the heated throw from the mains power supply when it is not in use.

Washing and Drying the Heated Throw

The controller must be disconnected from the heated throw before it is washed or dried.

Hand-washing the Heated Throw

Immerse the heated throw in water mixed with a hand-wash detergent and wash gently by hand.

CAUTION: Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

Machine Washing the Heated Throw

Wash the heated throw on a 'Wool' or 'Delicates' cycle, or according to the washing machine manufacturer's instructions, with a neutral detergent or mild soap powder at a maximum temperature of 40 °C.

CAUTION: Do not use high speed or extra spin cycles to clean the heated throw.

Drying the Heated Throw

Drape the heated throw over a clothing line and allow it to dry naturally; do not use pegs to secure the heated throw in place.

CAUTION: Never use any form of direct heat to dry the heated throw, such as radiators, heaters, hairdryers or tumble driers. Make sure that the heated throw is completely dry before reconnecting the controller and refitting back onto the bed.

Troubleshooting

Problem	Cause	Solution
The heated throw is not heating up.	The fuse may have blown.	Check the fuse by replacement.
The controller display is showing 'C'.	The control box has been placed under or inside the heated throw when in use. The heated throw has overheated and turned off.	Turn the heated throw off, unplug from the mains power supply and lay flat to cool.
The heated throw will not operate. The controller display is not showing any indicator lights. The controller display is showing 'P'.	The control box is not connected properly.	Turn the control box off, disconnect then reconnect. If this does not resolve the issue, the internal connection of the heated throw is broken. Dispose of the heated throw.
The controller display is not showing any indicator lights when a heat or time setting is selected.	The heated throw has been used whilst folded or tucked in. The heated throw has overheated and turned off.	Turn the heated throw off, unplug from the mains power supply and lay flat to cool.

<p>The controller display is showing 'E'.</p>	<p>The heated throw has been used whilst folded or tucked in. The heating element has been damaged or the thermal fuse in the controller has blown.</p>	<p>Dispose of the heated throw.</p>
<p>The controller display is showing indicator lights but the heated throw is not heating.</p>	<p>There is a loose connection between the control box and the heated throw.</p> <p>The selected heat setting is too low.</p> <p>The pre-heat time is too short.</p> <p>The heated throw is not in contact with the body.</p>	<p>Ensure the detachable plug is fitted correctly into the socket on the heated blanket.</p> <p>Increase the heat setting.</p> <p>Allow the heated throw more time to heat up. A longer preheat time is required from a lower ambient temperature.</p> <p>The heated throw may not feel warm to touch unless it is wrapped around the body. Areas of the heated throw not in contact with the body will stay cool.</p>

Storage

When the heated throw is not in use, it should be lightly folded and stored in a cool, dry place. Do not place items on top of the heated throw whilst it is in storage, as this may damage it.

Specifications

Product code: KL3738

Power: 120 W

Supply: 220-240 V ~ 50 Hz

Control: PS7-H/L

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

 
The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (⏏)

FOR UK USE ONLY - Plug fitting details (where applicable).

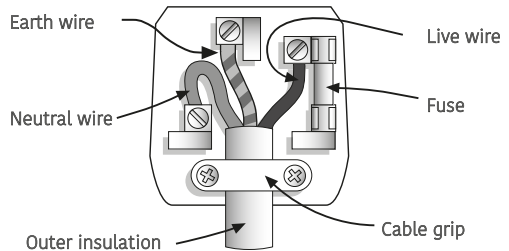

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter E or marked **⏏**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (**⏏**).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.kleeneze.com

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Kleeneze will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**
Made in China.

©Kleeneze Trademark. All rights reserved.

www.kleeneze.com

CD070623/MD000000/V1

