



WARNING: Do not have the controller set to a high heat setting whilst the bed is occupied; always switch it to the low heat setting. The high heat setting should only be used to preheat the bed. Unplug the blanket from the mains power supply when it is not in use.

Washing and drying the blanket

The controller must be disconnected from the blanket before it is washed or dried.

Hand-washing the blanket

Immerse the blanket in water mixed with a hand-wash detergent and wash gently by hand.



CAUTION: Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

Machine washing the blanket

Wash the blanket on a 'Wool' or 'Delicates' cycle, or according to the washing machine manufacturer's instructions, with a neutral detergent or mild soap powder at a maximum temperature of 40 °C.



CAUTION: Do not use high speed or extra spin cycles to clean the blanket.

Drying the blanket

Drape the blanket over a clothing line and allow it to dry naturally; do not use pegs to secure the blanket in place.



CAUTION: Never use any form of direct heat to dry the blanket, such as radiators, heaters, hairdryers or tumble dryers. Make sure that the blanket is completely dry before reconnecting the controller and refitting back onto the bed.

Troubleshooting

Problem	Cause	Solution
The blanket is not heating up.	The fuse may have blown.	Check the fuse by replacement.

Storage

When the blanket is not in use, it should be lightly folded and stored in a cool, dry place.

Do not place items on top of the blanket whilst it is in storage, as this may damage it.

Specifications

Product code: KL3754
 Double: 120 x 135 cm – 70 W
 Supply: 220–240 V ~ 50 Hz
 Control: TWK-1/T4B





Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

User manual

Heated under blanket

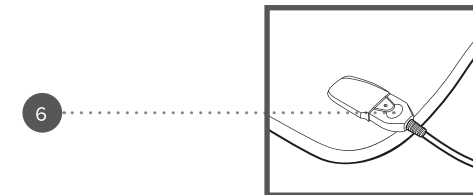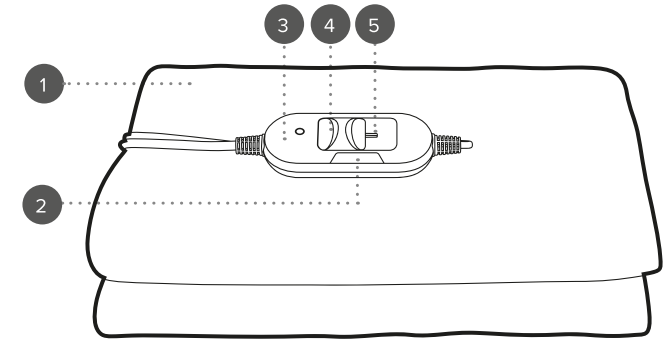

1. Blanket main unit
2. 3 heat settings
3. Temperature control box

4. Temperature control switch
5. Heat indicator light
6. Connector



Manufactured by:
 Ultimate Products UK Ltd.,
 Victoria Street, Manchester OL9 0DD. **UK.**
 Ultimate Products Europe Ltd.,
 19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD040716/MD060324/V7

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children younger than 3 years old should not use this product due to their inability to react to overheating.
- Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the product only if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This is not a toy. Children should be supervised to ensure they do not play with the product.
- Particular attention should be given where children and vulnerable people are concerned.
- This product must not be used by persons insensitive to heat or by other vulnerable persons unable to react to overheating.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. If storing, allow to cool fully before folding the blanket and store without items on top of the blanket to avoid damage from creasing.
- Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Do not immerse the control box or plug in water or any other liquid.
- Do not operate the product with wet hands.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not use the product for anything other than its intended use.
- Do not use this product outdoors.
- Do not attempt to move the product whilst it is in use.
- Do not insert pins into the product.

- Do not use the product folded or tucked in – regularly check that the blanket and cord do not become trapped or rucked.
- Do not use this product on an adjustable bed.
- Do not pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.
- Do not use the product when it is wet.
- Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product.
- This product is intended for domestic use only. It should not be used for commercial purposes or medical use in hospitals.

Dos and don'ts

DO:

Examine frequently for signs of damage or wear.
Use only as an under blanket only.
Only use with the detachable control unit provided.
Only use the lowest heat setting when the bed is occupied.
Only use the blanket with the control box supplied.

DO NOT:

Use if damaged.
Leave the product plugged in.
Operate overnight or while sleeping.
Use this product for extended periods of time – a build-up of heat could cause overheating of the body (heatstroke).
Clean the product with abrasive chemicals or materials, such as scourers, as they may damage the product and impair future function. (This includes insecticide and chemical solvents. Wash the blanket according to the instructions on the care label.)
Use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.
Use an extension cord with the product.

Thermal cut-out device

This product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens return the product to the manufacturer.

Care and maintenance

Before attempting any cleaning or maintenance, switch off the blanket and unplug it from the mains power supply.
Disconnect the controller from the blanket using the retaining clip on the connector.

The blanket has waterproof heating elements, making it safe to immerse in water and wash either by hand or by machine.



NOTE: Check the wiring between the two stickers. If there is any damage, stop using the blanket immediately.



CAUTION: Before washing, always remove the controller; do not allow any part of the controller to be immersed in water or any other liquid.

WARNING: Do not dry-clean the blanket.

Checking for wear and damage

Check the blanket regularly for signs of wear or damage. Return the blanket to the supplier who will advise on whether it is still safe to use.



WARNING: If the blanket shows any of the following signs of wear or damage, stop using immediately:

- Fraying fabric
- Scorch marks
- Exposed elements or internal parts
- Creasing or folding (which pose a risk of the blanket overheating)
- Soiling
- Damp/wet patches
- Tie down strings damaged or missing
- Worn flex cable or damage to plug
- Loose electrical connections

Instructions for use

STEP 1: Remove the bed sheets, duvet and pillows from the bed and place the blanket onto the bed with the controller positioned at the bedhead end. The blanket should be placed as close to the mattress as possible; beneath mattress protectors but above mattress toppers.

STEP 2: Smooth the blanket so that there are no creases or folds and then secure it by tightening and tying the strings provided. Take care not to overtighten the strings.

STEP 3: Secure the control box to the blanket using the connector, and then connect the blanket to the mains power supply. Check for satisfactory operation and replace the bedding.

STEP 4: To operate the blanket, select the low heat setting '1', the medium heat setting '2' or the high heat setting '3' by sliding the temperature control switch on the controller to the relevant marked indicator. The selected heat setting will also be indicated via the power indicator light.

Heat setting	Suggested use
0 (off)	Sleeping
1 (low heat)	Reading in bed
2 (medium heat)	Preheating the bed to a warm temperature
3 (high heat)	Preheating the bed to a hot temperature

STEP 5: Allow the blanket to preheat the bed. Once heated, switch off the blanket by sliding the thermostat control switch to the '0' position.

STEP 6: Unplug the blanket from the mains power supply.