

Kleeneze[®]
Staying Houseproud
SINCE 1923



2 IN 1 CORDLESS HAND VAC

22.2 V
LITHIUM-ION
BATTERY



CUSTOM
PURPOSE
TOOLS



HANDHELD
UNIT



INSTRUCTION MANUAL

**UP TO 45 MINUTES
OPERATING TIME**



Please read all of the instructions carefully and retain for future reference.

SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance away from heat or sharp edges that could cause damage.

Keep the appliance away from other heat emitting appliances.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not immerse the appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not use the adaptor to recharge non-rechargeable batteries.
Do not use the appliance if it has been dropped or if there are visible signs of damage.
Do not use the appliance for anything other than its intended use.
Do not use any parts/accessories or adaptors other than those supplied with this appliance, as this may cause damage.
Do not use any damaged accessories.
Do not use this appliance outdoors.
Do not store the appliance in direct sunlight or in high humidity conditions.
Do not use this appliance if any of the openings are blocked.
Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.
Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.
The hose should be checked regularly and must not be used if damaged.
Take care when equipping accessories with rotating parts as this could cause entrapment.
Switch off the appliance and disconnect it from the mains power supply before changing or fitting accessories.
Always ensure that the appliance has cooled fully after use before performing any cleaning or user maintenance.
Use of an extension cord with the appliance is not recommended.
Only use the appliance with the power supply unit provided.
This appliance should not be operated by means of an external timer or separate remote control system.
This appliance is intended for domestic use only. It should not be used for commercial purposes.

BATTERY SAFETY

The supply terminals are not to be short-circuited.

If the battery pack becomes exhausted, it should be removed from the product to avoid leakage.

In the event of the battery pack leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep the battery pack out of the reach of children.

Avoid storing the battery pack in direct sunlight.

Do not dispose of the battery pack in a fire.

Do not crush, puncture, dismantle or otherwise damage the battery pack.

Do not store above 60 °C.

Do not expose the battery pack to heat or fire as it may explode.

Do not subject the battery pack to mechanical shock.

Do not dispose of the exhausted battery pack in household waste.

Once the battery pack becomes exhausted, take it to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 22.2 V 2200 mAh Li-ion battery (non-removable).

DOS AND DON'TS

Do:

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

Clean the dust container and HEPA filter at least every three weeks with clean water to keep the vacuum cleaner working efficiently.

Don't:

Use the vacuum cleaner without the HEPA filter or dust container in position.

Use the vacuum cleaner to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

CARE AND MAINTENANCE

Wipe the external surface of the vacuum cleaner with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents or cleaning agents to clean any part of the vacuum cleaner.

Keep the HEPA filter clean and replace when it becomes worn.

GETTING STARTED

Remove the vacuum cleaner from the box.

Remove any packaging from the vacuum cleaner.

Place the packaging inside the box and either store or dispose of safely.

IN THE BOX

2 in 1 Cordless Hand Vac
Telescopic extension tube
Accessory adaptor
Floor brush
Crevice tool

Upholstery tool
Brush tool
Mains power adaptor
Instruction manual

FEATURES

22.2 V lithium-ion battery
4-5 hours charge time
Easily converts into a handheld unit
600 ml dust container
Washable HEPA filter

Lightweight design
2 speed settings
25-45 minutes operating time
Includes crevice tool, brush tool
and upholstery tool

DESCRIPTION OF PARTS



- | | |
|---|---------------------------------------|
| 1. 2 in 1 Cordless Hand Vac handheld unit | 10. Upholstery tool |
| 2. Air inlet | 11. Power button |
| 3. Accessory adaptor | 12. Charging indicator light |
| 4. Accessory adaptor release button | 13. Dust container |
| 5. Telescopic extension tube | 14. Dust container release button |
| 6. Telescopic extension tube button | 15. Dust container base release latch |
| 7. Floor brush | 16. Cyclonic cone |
| 8. Brush tool | 17. HEPA filter |
| 9. Crevice tool | 18. Charging port |

INSTRUCTIONS FOR USE

BEFORE FIRST USE

Before using the vacuum cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the vacuum cleaner in water or any other liquid.

CHARGING THE 2 IN 1 CORDLESS HAND VAC

Before first use, the vacuum cleaner must be charged for approx. 4–5 hours. Subsequent charging times will vary dependent upon use. If the vacuum cleaner battery becomes drained completely during use, it may take up to 4–5 hours to fully recharge.

STEP 1: Check that the vacuum cleaner is switched off.

STEP 2: Connect the mains power adaptor to the charging port on the handheld unit.

STEP 3: Plug the mains power adaptor into the mains power supply; the charging indicator light will flash during charging and then remain illuminated once the battery is fully charged.

Warning: Do not use any mains power adaptor other than that supplied.

Using an alternative will increase the risk of damage to the appliance or injury to the user.

USING THE 2 IN 1 CORDLESS HAND VAC

STEP 1: Check that the vacuum cleaner is switched off and unplugged from the mains power supply.

STEP 2: Turn on the vacuum cleaner by pressing the power button; press once for the minimum power setting, press twice to use the maximum power setting.

STEP 3: To turn off the vacuum cleaner, press the power button.

Warning: Do not use the vacuum cleaner without the HEPA filter, cyclonic cone and dust container in position. Clean the HEPA filter regularly to preserve the suction of the vacuum cleaner.

USING THE TELESCOPIC EXTENSION TUBE AND FLOOR BRUSH

The telescopic extension tube can be fitted onto the accessory adaptor to extend reach, ideal for floor-to-ceiling cleaning.


STEP 1: Fit the extension tube onto the accessory adaptor.

STEP 2: Push the floor brush onto the end of the telescopic extension tube and secure into place.

STEP 3: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding out the inner tube.

STEP 4: Turn on the vacuum cleaner by pressing the power button. Press once for the minimum power setting, press twice to use the maximum power setting.

Note: Whilst the accessory adaptor comes pre-attached to the air inlet, it can be removed by pressing the accessory adaptor release button and pulling away from the air inlet. Lower the switch on the floor brush to expose the bristles for use on hard floors. Lift the switch to hide the bristles for use on carpets.

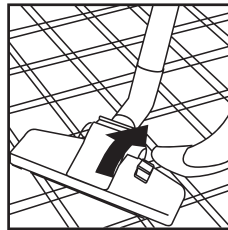

USING THE CREVICE TOOL

The shape of the crevice tool makes it ideal for cleaning radiators, corners, recesses and other hard-to-reach areas.

STEP 1: If required, fit the extension tube onto the accessory adaptor.

STEP 2: Push the crevice tool onto the end of the extension tube. If no extension is required, push the crevice tool directly onto the handheld unit accessory adaptor.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

STEP 4: To remove the crevice tool from the extension tube or accessory adaptor, pull the crevice tool firmly away from the end of the extension tube or the accessory adaptor.

USING THE UPHOLSTERY TOOL

The upholstery tool is suitable for removing dust and dirt from folds in fabrics, curtains and upholstery.

STEP 1: If required, fit the extension tube onto the accessory adaptor.

STEP 2: Push the upholstery tool onto the end of the extension tube.

If no extension is required, push the upholstery tool directly onto the accessory adaptor.

STEP 3: Turn on the vacuum cleaner by pressing the power button.

STEP 4: To remove the upholstery tool from the extension tube or accessory adaptor, pull the upholstery tool firmly away from the end of the extension tube or the accessory adaptor.

EMPTYING THE DUST CONTAINER

Before emptying the dust container, check that the vacuum cleaner is switched off. If the vacuum cleaner has been used as a handheld unit, remove the chosen attachment by carefully pulling it away from the accessory adaptor.

It is recommended to empty the dust container outdoors.

STEP 1: Whilst securely holding the handheld unit, press the dust container release button and pull the dust container away.

STEP 2: Holding the dust container over a bin or refuse bag, press the dust container base release latch to release the dust container base. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.


STEP 3: Close the dust container by pushing the base closed until the base release catch locks back into position.

STEP 4: Replace the dust container by aligning it with the handheld unit and then, whilst holding the dust container release button, push it into place until secure.

Note: The dust container can be cleaned once empty by rinsing it under clean, warm water. Allow to dry thoroughly for approx. 24 hours.

CLEANING THE HEPA FILTER

The HEPA filter can only be accessed when the dust container has been removed from the handheld unit.

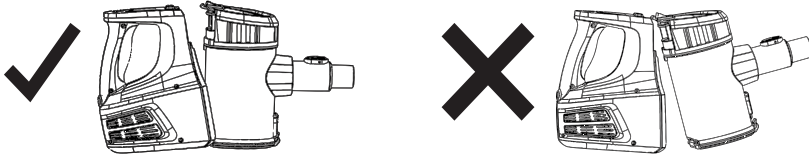

STEP 1: Remove and empty the dust container by following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, remove the dust container lid by twisting it in an anticlockwise direction, then lift it away from the dust container.

STEP 3: Release the cyclonic cone by lifting it out of the dust container.

STEP 4: Lift the HEPA filter out of the top of the cyclonic cone.

STEP 5: Shake the HEPA filter until the majority of the dust has been removed, then rinse under clean, warm water and allow to dry naturally for approx. 24 hours.

STEP 6: Once the filter is fully dry, place the HEPA filter into the cyclonic cone, pressing it firmly into position.

STEP 7: Refit the cyclonic cone into the dust container and then replace the dust container lid. Twist it in a clockwise direction to lock it securely into place.

Note: Do not clean the filter using detergents or use external heat sources such as radiators to dry them.

Warning: Do not reassemble or use the vacuum cleaner until the HEPA filter is fully dry, as this could cause damage.

STORAGE

Check that the vacuum cleaner is cool, clean and dry before storing in a cool, dry place.

TROUBLESHOOTING

Symptom	Possible Cause	Solution
The vacuum cleaner will not charge.	The mains power adaptor lead is not securely connected.	Connect the mains power adaptor to the charging port on the handheld unit, following the instructions in the section entitled '2 in 1 Cordless Hand Vac'.
The suction is poor.	The air inlet is blocked.	Disconnect the attachment and clear the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The HEPA filter is blocked.	Clean the washable filter following the instructions in the section entitled 'Cleaning the HEPA Filter'.

SPECIFICATIONS

Product code: KL0737

Battery: 22.2 V 2200 mAh Li-ion (included)

Adaptor: Input 100–240 V AC, 50/60 Hz

Output: 26.5 V DC 500 mAh



NOTES:

NOTES:



**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: +44 (0)161 934 2268

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customersupport@kleeneze.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer’s guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Kleeneze will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelee bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3 YEAR
Guarantee*

*To be eligible for the extended guarantee, go to <http://guarantee.upgs.com/kleeneze/> and register your product within 30 days of purchase.



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK
+44 (0)333 577 9820

customersupport@kleeneze.com
©Kleeneze Trademark. All rights reserved.

Please retain instructions for future reference.
MADE IN CHINA.

CD290819/MD000000/V1

